



## **Flo-Tite Full Port Multi-Choice Models 350-SL / 370-SL Series Sanitary Type 3-Piece Ball Valves -1000 WOG Installation, Operation and Maintenance Manual**



Note: Before using a valve, read the entire IOM carefully and make sure you have a clear understanding of all information included.

This manual describes the procedures for the safe and efficient installation, operation, and maintenance of Flo-Tite Full Port, Multi-Choice Series. **Failure to follow the procedures in this manual may result in Flo-Tite warranties being voided.** Problems with the operation and maintenance of these valves should be directed to the nearest Flo-Tite representative.

The Flo-Tite 350-SL / 370-SL Series is designed as a split body, three piece construction, to allow ease of access for maintenance of the valve ball and seat without special tools. This line of valves utilizes the “free floating” ball principle. The ball is not fixed, but is free to move with the line pressure. As a result, these valves are capable of tight shut off with the flow in either direction or dead-ended, regardless of the position of the valve in the line. The downstream seat, which is opposite the pressurized side of a closed valve, must carry the load exerted by the line pressure on the ball, while the upstream seat is subject to little load or wear. For this reason, it is sometimes possible to increase useful seat life by turning the valve end to end in the pipeline.

### **INSTALLATION:**

#### **A. Receiving and Preparation Procedure**

- A1. Remove shipping protection
- A2. Inspect the valve(s) for transportation damage\*
- A3. Inspect the valve bore and remove any debris
- A4. Cycle the valve and inspect the valve for smooth operation, size permitting
- A5. As shipped from the factory, valves may contain a silicone based lubricant. This is for break-in and may be removed if it is objectionable for a particular application by disassembling and solvent washing.

\*If transportation damage is found, immediately take pictures for record purposes and contact the inbound carrier to submit a claim.

#### **B. Installation Procedure**

B1. **General** – The valve may be fitted in any position in the pipeline. Prior to installing the valve, the pipe on either side of the intended installation should be checked to be free of dirt, debris, weld slag, etc. to prevent damage to the seats, seals, and surface of the ball. The piping must also be free of tension or compression.

**WARNING** – Never use the valve as a pipe support or structural member.

## B2. **Installation** of the Flo-Tite Full Port Models 350-SL / 370-SL Series 3-Piece Ball Valves -1000 WOG Multi- Choice Connections.

Valves with screwed ends should be treated as a single unit and should not be dismantled when installing into the pipeline. Before installing the valve, ensure that the threads on the mating pipe are free from excessive grit, dirt or burrs. Use thread sealant compatible with system media to apply mating threads. Apply wrench only on the hexagon end of the valve cap. In some applications, screwed valves are back-welded on site. These valves must be disassembled as per instructions for Weld-End Valves.

**Caution** – **Tightening** by using the valve body or handle can seriously damage the valve.

## C. OPERATION:

C1. Manual operation of the valve is accomplished by turning the handle ¼ turn (90 degrees).

\*The valve is open when the handle is “in-line” with the valve or pipeline. The valve is closed when the handle is “across” or perpendicular to the valve or pipeline.

C2. Flo-Tite 350-SL / 370-SL Series valves can also be operated with either manual gears, electric or pneumatic actuators. For instructions on installation and operation, refer to the IOM for the correct operator.

C3. Flo-Tite 350-SL / 370-SL Series valves may include one of several different styles of limit switches and positioners. Please refer to the appropriate IOM for each device.

## MAINTENANCE:

### **CAUTION**

Ball valves can trap fluid in the ball cavity when closed. Be prepared to capture and manage any liquid retained in the valve body when disassembling the valve.

### **WARNING**

If the valve has been in hazardous fluid service, review applicable MSDS sheet and decontaminate the valve before disassembly. All persons involved with the disassembly should wear personal protection equipment such as aprons, gloves, face shield, etc. to prevent personal injury.

Access to the valve internals starts with relieving pressure in the pipeline. Turn the valve handle to the 45 degree, half open position and flush the line. When applicable, remove any hazardous material from the line. Consult the metal tag attached to the valve body to determine the correct seat and seal materials. Repair kits can be ordered from your local Flo-Tite representative. This should be done prior to any disassembly work.

### **CAUTION**

Valves with actuators, limit switches, or positioners should have these devices disassembled from the valve prior to disassembling the valve.

### **WARNING**

Use extreme caution disconnecting any electrical and/or pneumatic sources from the valve to protect against personal injury. Isolate the valve actuator prior to disconnecting.

### Replacing body seats and seals-

Place the handle in the fully open position. Remove three cap screws and loosen the fourth on one side. Repeat on the opposite side with the corresponding cap screws. The center body should “roll” out. The body seals and valve seats can be removed and replaced with each end cap. Note – It may be necessary to allow for some pipe flex or spread to completely remove the center body from the ends once all bolts are removed.

### Replacing stem seals-

With the valve in the closed position, carefully remove the ball and place on a clean shop rag to prevent damage to the ball or allow the buildup of any debris. Remove the handle nut, handle, and stem nut. Gently tap the top of the stem with a non-metallic hammer to allow the stem to move into the body cavity. A lock washer, Belleville washers, packing gland sleeve, and packing will now be free to come out of the packing gland (Note: A packing pick may be required to remove some of the packings). The stem can carefully be removed from the body to replace the thrust-bearing and guide seal.

### **CAUTION-**

1. Ensure that the anti-static spring is retained in the stem as the stem is removed and again when the stem is re-inserted.
2. Carefully note the sequence that all internal pieces come apart as it is mandatory that they are reinstalled in the same sequence.

### Visual Inspection-

Clean and inspect all metal parts. It is not necessary to replace the ball and stem unless the seating surfaces have been damaged by abrasion or corrosion. Flo-Tite strongly recommends that all seats, seals, and packing be replaced whenever a valve is disassembled for reconditioning. This is the surest protection against subsequent leakage after reassembly. Replacement parts are sold in kit form. Refer to the metal tag attached to the side of the valve body to identify the specific sealing materials used. Kits can be obtained via the local Flo-Tite distributor or calling FloTite directly. Replacement parts should be purchased prior to valve disassembly. Required information to purchase replacement parts include:

- a. Line size
- b. Model designation
- c. Seat/seal materials – see stamping on a metal tag attached to the valve body.

### Valve Reassembly -

**Note- the valve may be reassembled and operated dry when no lubricants are allowed in the system. However, a light lubricant on the ball and stem will aid in assembly or reduce initial operating torque. The lubricant used must be compatible with the intended system fluid.**

Replace the stem in the reverse order from above based on valve size, including reattaching the handle. Turn the handle to the closed position. This will align the stem tang and the ball slot. Slide the ball into position. Turn the handle to the open position to help hold the ball in place. Install seats and seals in the end caps with the spherical curvature facing the ball. “Roll” the body back up making sure the seats and seals in the end caps are secure and in the correct position. Replace the three cap screws on each side and hand tighten. Final tightening should be done in a star pattern. Cap screws should be tightened per below.

Packing, packing gland sleeve, Belleville washers, lock washer and gland nut can be assembled. The gland nut should only be hand tightened to prevent over compression of the packing. The pipeline needs to be reingressurized slowly to prevent any water hammer. Any stem leakage can be corrected by tightening the stem nut one flat at a time.

**Note:**

Make sure ball is in the closed position before tightening up the end connections.

**WARNING:**

Over tightening the stem nut will lead to over-compression of the packing, cause premature wear of the packing and require additional force to operate the valve.

Mounting Actuators –

Flo-Tite has designed the 350-SL / 370-SL Series valves with a top works that are compatible with the requirements of the ISO-5211 bolting flange. This makes the valve compatible for mounting actuators from multiple manufacturers. Flo-Tite's own *Air-Con* Pneumatic Actuators and *Pro Torque* Electric Actuators are easily adaptable to the 350-SL / 370-SL valve series. Please refer to the specific actuator supplier's IOM directions for installation directions.

Repair Kits –


Repair kits typically consist of replaceable seats, body seals and packing seals. Refer to the unit nameplate, as shown below, to confirm what materials are currently installed. Contact your local Flo-Tite Representative to order and receive the kits prior to any maintenance work.

VALVE - SOFT PARTS							
SEAT		STEM SEALS		BODY SEAL		O-RINGS	
TFM	F	TFM	F	TFM	F	VITON	V
CTFM	Y	CTFM	Y	CTFM	Y	EPDM	E
PTFE	T	RTFM	X	PTFE	T	PTFE	T
RPTFE	R	PTFE	T	RPTFE	R	BUNA	B
50/50	S	RPTFE	R	50/50	S	NONE	N
UHMWPE	U	50/50	S	UHMWPE	U		
PEEK	P	UHMWPE	U	PEEK	P		
Cavity Filled	C	PEEK	P	Graphite	G		
Metal	M	Graphite	G	Kel-F	K		
Kel-F	K						

**Flo-Tite's marking system follows MSS SP-25-1998**

**Valve Markings-** Casted into valve bodies include the following; Flo-Tite Name, Model Numbers, Body Material, Valve Size, & WOG Pressure Rating

All Flo-Tite valves have metal nameplates spot welded to the valve body.

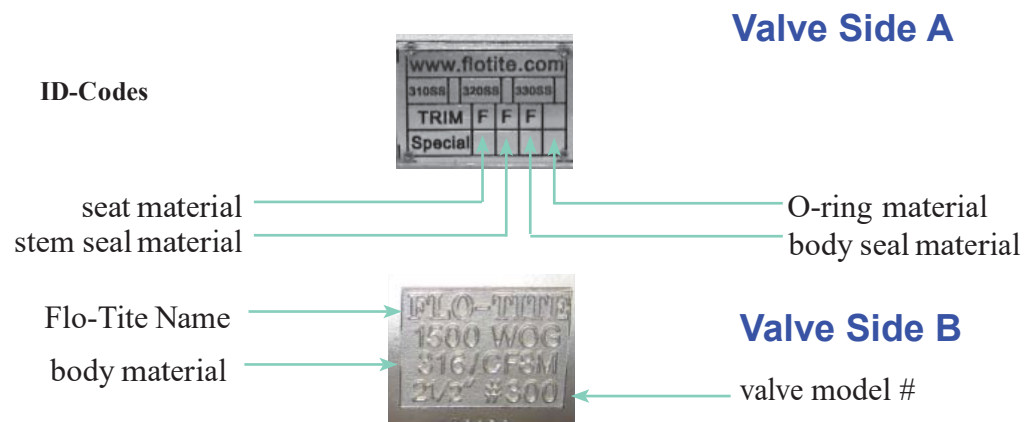**Standard Trim Soft Parts**


Please carefully review all important procedures in this manual. If anything is unclear, please feel free to contact Flo-Tite directly.

**Bill of Materials**

NO.	PART NAME	MATERIAL
1	BODY	A351-CF3M
2	CAP	A351-CF3M
3	STEM	SS316L
4	PACKING FOLLOWER	SS304
5	DISK SPRING WASHER	SS301
6	LOCK WASHER	SS304
7	BALL	A351-CF3M
8	SEAT/CAVITY FILLER	PTFE/TFM
9	PACKING	PTFE/TFM
10	THRUST WASHER	PTFE/TFM
11	SET SLEEVE	SS304
12	SET BOLT	SS304
13	THIN NUT	SS304
14	BOLT	SS304
15	HANDLE	SS304
16	LOCATING LOCK	SS304
17	PLASTIC COVER	PLASTIC

1/2" - 2"  
**Exploded View**

2 1/2" - 4"  
**Consult Factory**

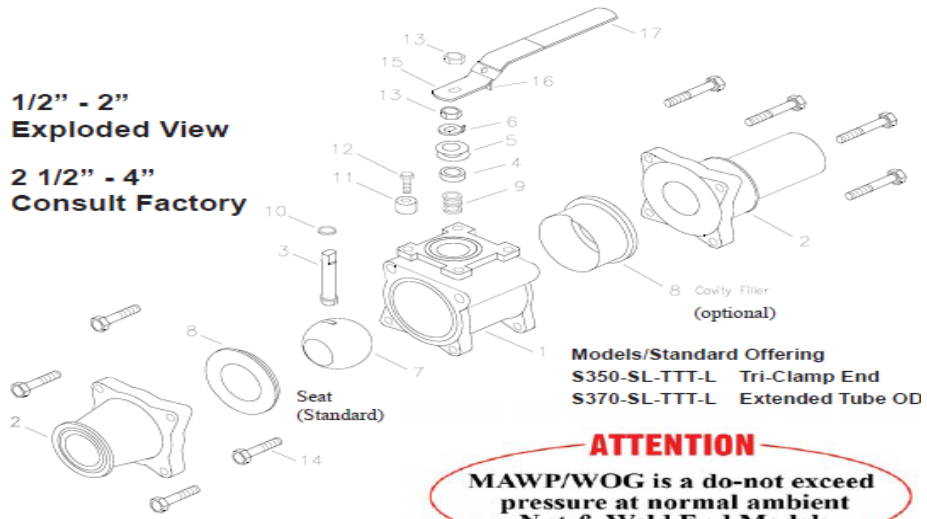


**Models/Standard Offering**  
**S350-SL-TTT-L** Tri-Clamp End  
**S370-SL-TTT-L** Extended Tube OD

**ATTENTION**  
**MAWP/WOG is a do-not exceed pressure at normal ambient Npt & Weld End Models**

**Pressure Ratings**

Valve Body: 1000psi MAWP/WOG  
 Steam Rating: 150psi WSP  
 Vacuum Rating: 20 micron

**Pressure/Temperature Chart**

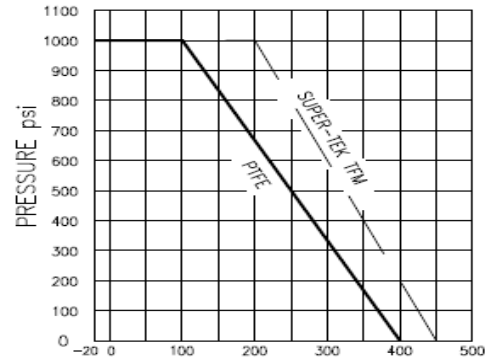


**Specifications**

Valve bodies and end connections are high quality investment cast and solution annealed. Body shell wall thickness complies with ASME B16.34.


BPEa compliant with < 3% ferrite and 0.005 to 0.007 sulfur content in the extended tube ends for orbital welding, consult factory.

Valve stems are blow-out proof for maximum safety and comply with ASME B16.34.

All standard materials of construction comply with FDA requirements and all soft goods meet USP Class IV standards.

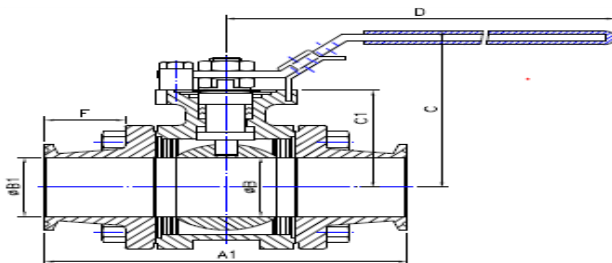

**TRI-CLAMP END MODEL S350**

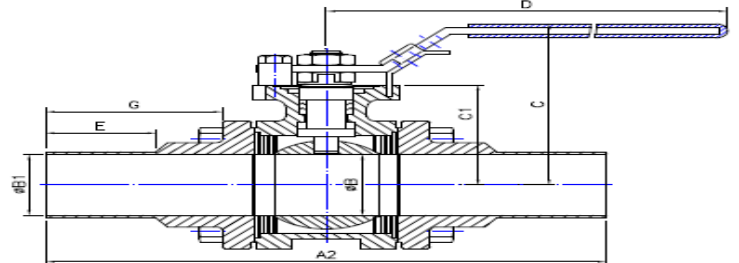

**EXTENDED TUBE O.D. B/W END MODEL S370**

**Dimensions**

SIZE in mm	A1	A2	B	B1	C	C1	D	E	F	G	Cv	Torque		Weight	
												w/o CF	In-Lbs/Nm w/ CF	S350	S370
1/2" 15	3.60 91.5	6.00 152.4	0.370 9.4	0.370 9.4	2.60 66	1.54 39	6.50 165	1.50 38.1	0.94 24	2.14 54.4	9.5	65 7.3	72 8.1	2 0.9	3 1.4
3/4" 20	4.11 104.5	6.00 152.4	0.620 15.8	0.620 15.8	2.60 66	1.54 39	6.50 165	1.50 38.1	1.20 30.5	2.14 54.4	30	80 9.0	100 11.3	3 1.4	4 1.8
1" 25	4.48 113.8	6.50 165.1	0.870 22.1	0.870 22.1	2.91 73.9	1.66 42	6.50 165	1.50 38.1	1.23 31.3	2.24 56.9	65	120 13.6	174 19.7	4 1.8	5 2.3
1 1/2" 40	5.06 128.4	7.50 190.5	1.370 34.3	1.370 34.3	3.62 91.9	2.25 57.3	7.87 200	1.50 38.1	1.12 28.5	2.34 59.5	205	238 26.9	295 33.3	7 3.2	10 4.5
2" 50	5.75 146	8.50 215.9	1.870 47.5	1.870 47.5	4.53 115.1	2.95 75	7.87 200	1.77 45	0.99 25.2	2.37 60.1	420	380 42.9	550 62.1	10 4.5	16 7.3
2 1/2" 65	6.85 174	10.0 254	2.370 60.2	2.370 60.2	5.04 128	3.39 86	9.65 245	2.19 55.6	1.15 29.3	2.73 69.3	675	610 68.9	1000 113	20 9.1	23 10.4
3" 80	7.40 188	11.5 292.1	2.870 72.9	2.870 72.9	6.42 163.1	3.72 94.5	15.4 390	1.77 45.1	1.08 27.5	3.13 79.6	989	840 94.9	1220 137.8	32 14.5	33 15.0
4" 100	8.76 222.5	12.5 317.5	3.834 97.4	3.834 97.4	7.09 180.1	4.35 110.5	15.4 390	2.00 50.8	1.25 31.7	3.12 79.3	1765	1850 209	2600 293.8	55 24.9	61 27.7

Valve end connections are interchangeable within the multi choice sanitary valve series



Flo-Tite, Inc.  
 4815 West 5th St.  
 Lumberton, NC 28358

P. O. Box 1293  
 Lumberton, NC 28359  
 Website: www.maxsealinc.com

Tel: (910) 738-8904  
 Fax: (910) 738-9112  
 E-mail: sales@maxsealinc.com