



Flo-Tite Media Containment Series **Installation, Operation and Maintenance Manual**

Note: Before using a valve, read the entire IOM carefully and make sure you have a clear understanding of all information included.

This manual describes the procedures for the safe and efficient installation, operation, and maintenance of Flo-Tite Media Containment Series Ball Valves. **Failure to follow the procedures in this manual may result in Flo-Tite warranties being voided.** Problems with the operation and maintenance of these valves should be directed to the nearest Flo-Tite Representative.

INSTRUCTION:

1. Remove handle or if have actuator remove actuator with bracket and coupler.
2. Remove the existing bonnet.
3. Place Teflon Gasket on valve.
4. Place Media Containment bonnet on the valve.
5. Tighten up the four screw.
6. Place handle back or if have actuator put bracket and coupler back on bonnet.

Note: if any valve has two bolts packing glands remove it from valve and replace the existing stem with the threaded stem and conversion kit.