


NAMUR Trip Valve With 1646 (External Ported) IOM

General

This installation document is a supplemental data to the NAMUR Trip Valve IOM. Refer to the NAMUR Trip Valve IOM for more information.


Modification from Standard NTV

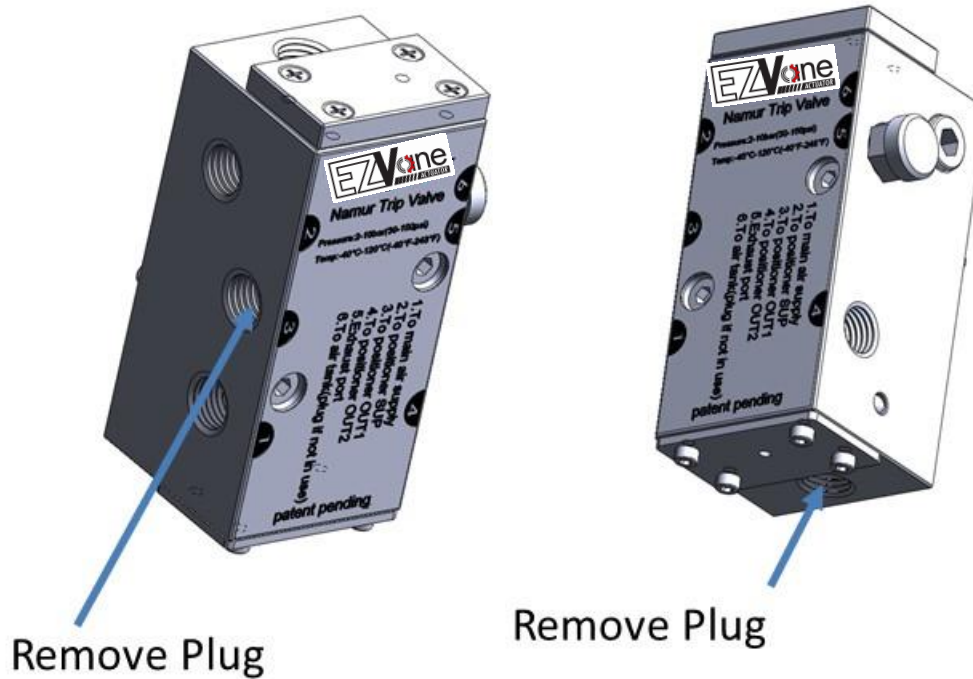

Fail-Clockwise Setup & Piping

If there is loss of air signal, actuator will move CW.

Fail-CW Setup with 1646 + NTV

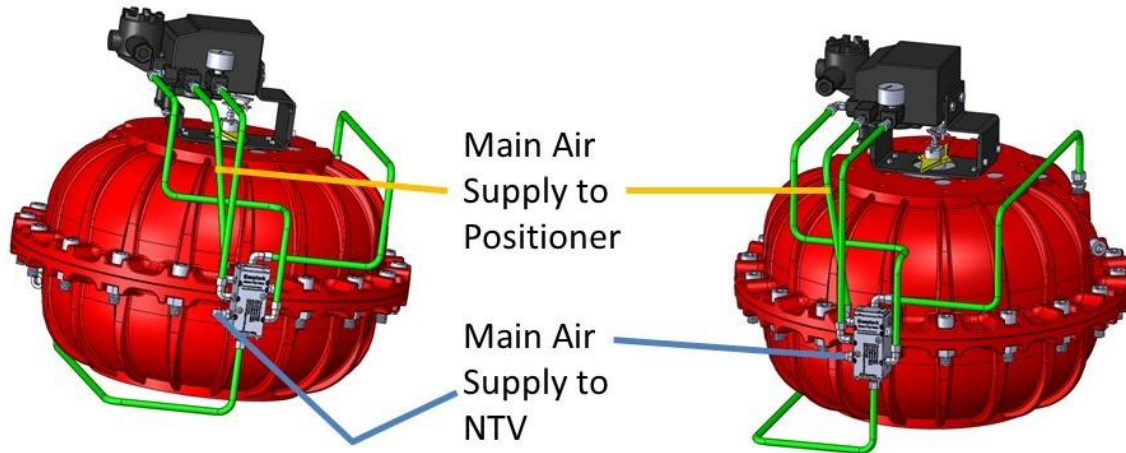

Fail-Counter Clockwise Setup & Piping

If there is loss of air signal, actuator will move CCW. (Note NTV is rotated 180 degrees)

Fail-CCW Setup with 1646 + NTV

